



GENERAL INSTALLATION INSTRUCTIONS

Shaw Sports Turf's NaturalPlay system is installed in a 2" pile height with 6 lbs/ft² of sand, 0.60 lbs/ft² of Geofill and 0.75 lbs/ft² of SafeShell, in that order.



1. A lift of 6 lbs/ft² of sand is added. Average infill depth should be approximately 20 mm to 22 mm.

**see note below*



2. Groom in infill. Grooming may require "Spring Tine" attachment on groomer depending on fiber erectness.



3. A lift of 0.60 lbs/ft² of Geofill is added. Average infill depth should be approximately 30 mm to 32 mm.



4. Groom in infill. Grooming may require "Spring Tine" attachment on groomer depending on fiber erectness.



5. A lift of 0.75 lbs/ft² of SafeShell is added. Average infill depth should be approximately 32 mm to 35 mm.




6. Groom in infill. Recommend using a baseball drag to break down the Geofill and level the infill out.



Drop Spreader applying sand



Groomer

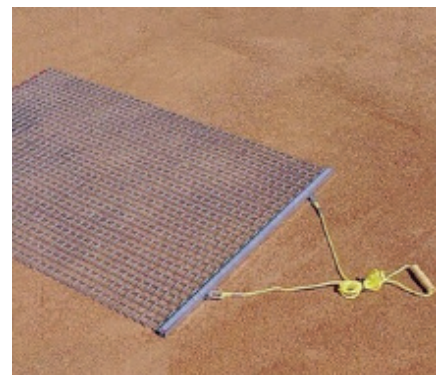

Baseball Drag attachment

*6 lbs of sand can't be dropped at once without trapping fibers. The sand needs to be split up into a minimum of 3 to 5 lifts, depending on how the fibers accept the sand. The infill needs to be groomed in after each lift.

PLEASE NOTE: Installation should not happen when material is wet. If there is a significant rain event before the product is settled, some migration may occur and additional grooming will be required.