


Our connector kit makes a soldered and watertight connection in less than 5 min.



1. Align cables for +/-



2. Heat-shrink connectors

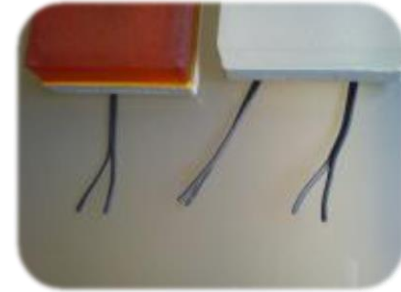

Each LED-module has it's own conductors:
Rectgle. Beckstone 2 LEDs
Square Beckstone 1 LED

3. Apply end cap



4. Heat-shrink end cap




Tools needed:

- Wire stripper
- Heatgun




Installation is flexible and easy like paving
- low installation depth of only 5 inches!

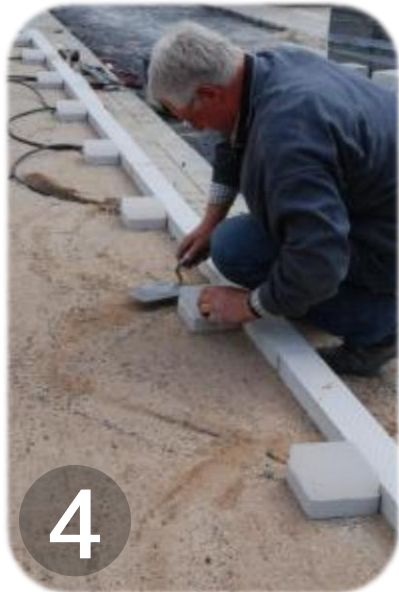


Installation in Concrete

BEFORE POURING CONCRETE

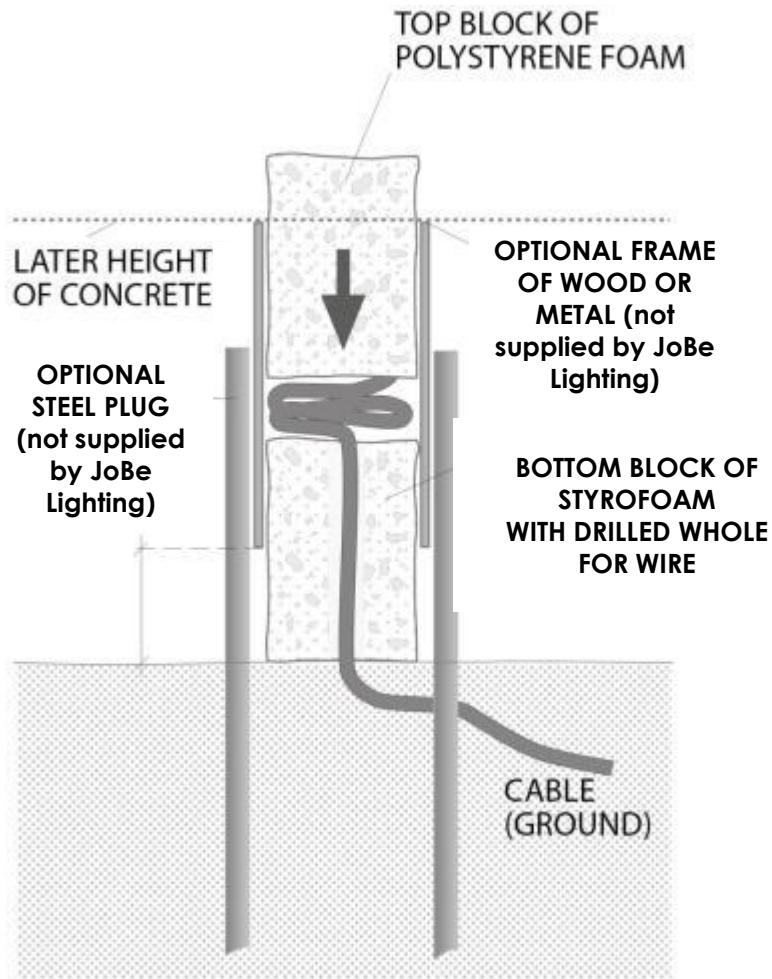

AFTER POURING CONCRETE

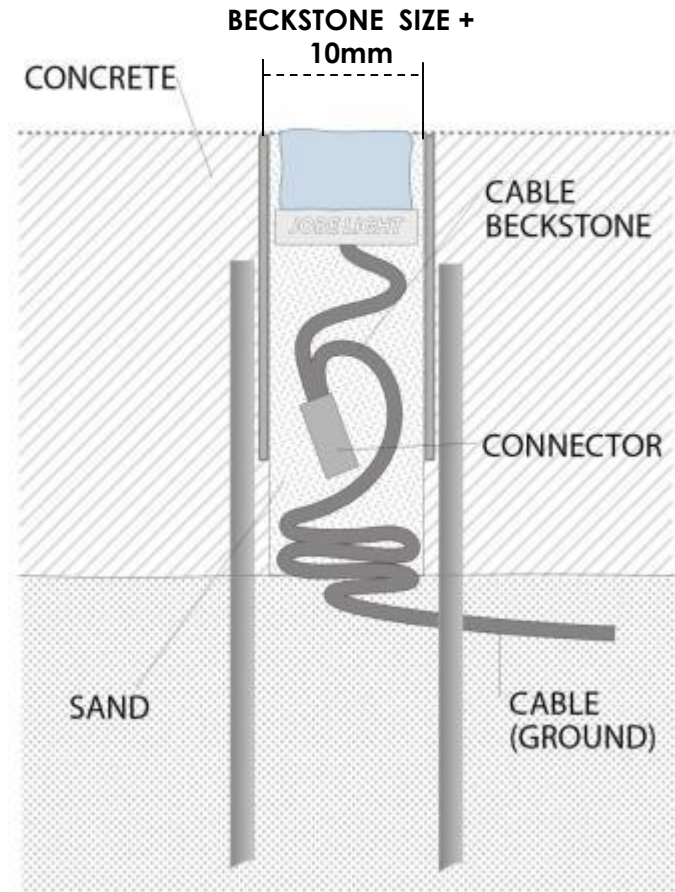

Installation in Concrete

