


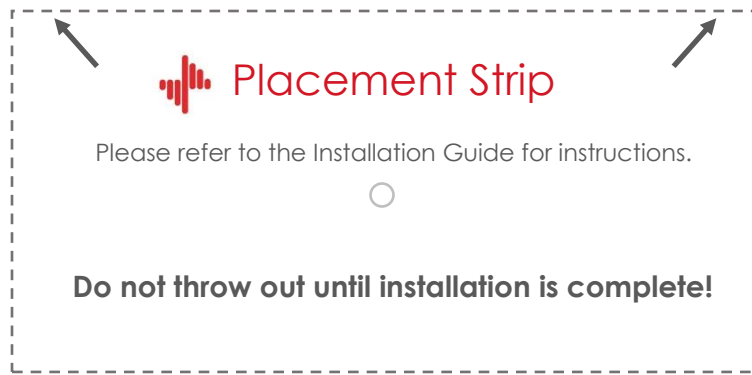

1. Cut along the outer dashed line to create the placement strip. Once cut, it should measure 3-7/8" wide by 1-7/8" tall.
2. Punch through the circle in the centre of the strip. There is a small amount of wiggle room when mounting but try to be as precise as possible.