

Congratulations on the purchase of acoustic panels from APC. Handle the panels with care, and they will provide you a lifetime of service.

These instructions are provided as a general guideline and we recommend following best practices in construction for all installations. Please read all instructions before beginning installation.

Take a moment to ensure that your shipment is complete, that the shipment contents are accurate, and that you have the necessary tools to begin installation.

Included with your panels:

- Shipment contents list
- This instruction sheet
- Placement strip
- Z-clips
- Wall plugs
- Screws

Tools You'll Require:


- A level
- A pencil
- Drill with 3/16" drill bit
- Philips (cross head) screw driver

INSTALLATION

Attached to the back of the panel are two z-clips near the top corners, as shown in the picture on the right. The panel is mounted to the wall by mating the z-clips on the panel with matching z-clips on the wall.

Orientation is important for proper mounting – make sure to position the panel with the z-clips to the top.

1. Hold the panel up to the wall where you'd like to mount it. Use a level against the panel's side and top to confirm its alignment.
2. Mark the top two corners of the panel on the wall by running a pencil lightly 3" along the top and sides of the panel closest to the corners. Lines must cross to make a corner marking on the wall.

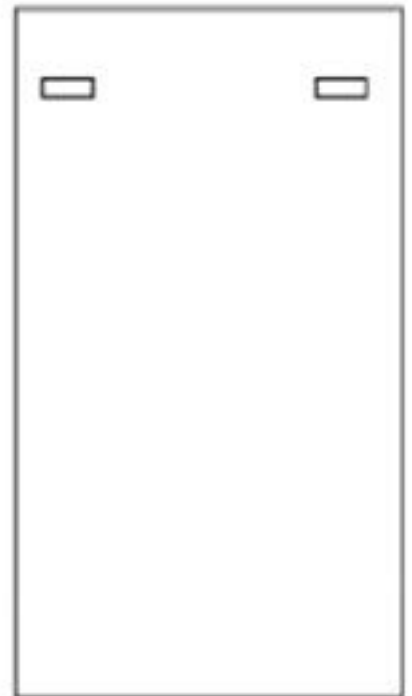

3. Set the panel aside. Align the top-left corner of the placement strip (as shown in the image on the right) with the pencil marks for the top-left corner of the panel. Using a screw or sharp pointed object, punch through the centre of the small circles. Placement of the circles is important to ensure your panel hangs level. Repeat this step for the top-right corner.
4. Drill into the center of the marked holes making sure to drill the depth of the wall plug length – about 1½".
5. Insert a plug into each hole and press flush to the wall.
6. Mount the z-clip to the wall using the screws. The z-clip is oriented correctly when the section with the holes is flush against the wall and the top section is NOT flush against the wall (as shown in the image to the right). The “monarch” engraving is at the top and faces out. DO NOT OVERTIGHTEN – z-clip should be snug but not digging into the wall.
7. Repeat with second z-clip.
8. Mount the panel by aligning it with the side pencil marks made in step 1 and gently pulling down so the top of the panel lines up with top pencil marks.



Once the panel has been installed, you can remove it from the wall at any time by lifting it up.

Shipment Contents List

Item		Checked By
Number of panels:		
Colour:		
Size:		
Type:		
	1 placement strip	
	2 z-clips per panel	
	4 wall plugs per panel	
	4 screws per panel	